


Recovery ThinInx OS to Disk

 
- **Create bootable USB drives**

Create bootable USB drives for Ghost tools , download Rufus from <http://rufus.ie/>


Boot selection ISO : **ghost12.iso**

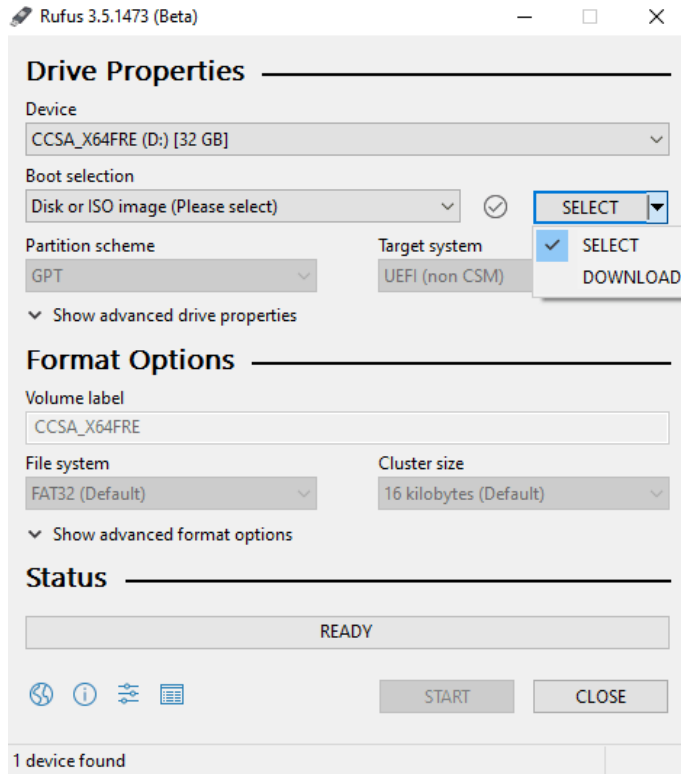

Partition scheme and Target system :



File system and Cluster size:

 


After finishing save GHO file to USB drive, [example: ThinClient-GLA-4.16.18-1611.GHO] ;

- **Recovery ThinInx OS to Disk**


Insert the USB drive into the Thin Client and turn on the Thin Client device;

When booting up, press the shortcut key "F11" to enter the boot menu, and select USB drive to boot;


【Note: Different USB drive show different names for booting USB drive】

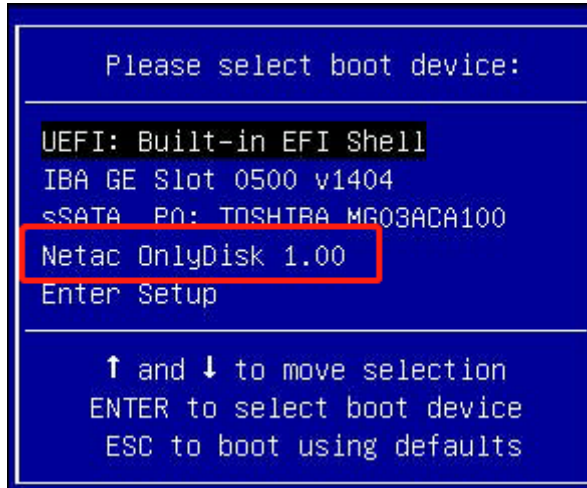


After booting the USB drive, a window is displayed, waiting for the automatic output of data in the window; Go to the "Ghost" interface and click "OK" in the displayed prompt;

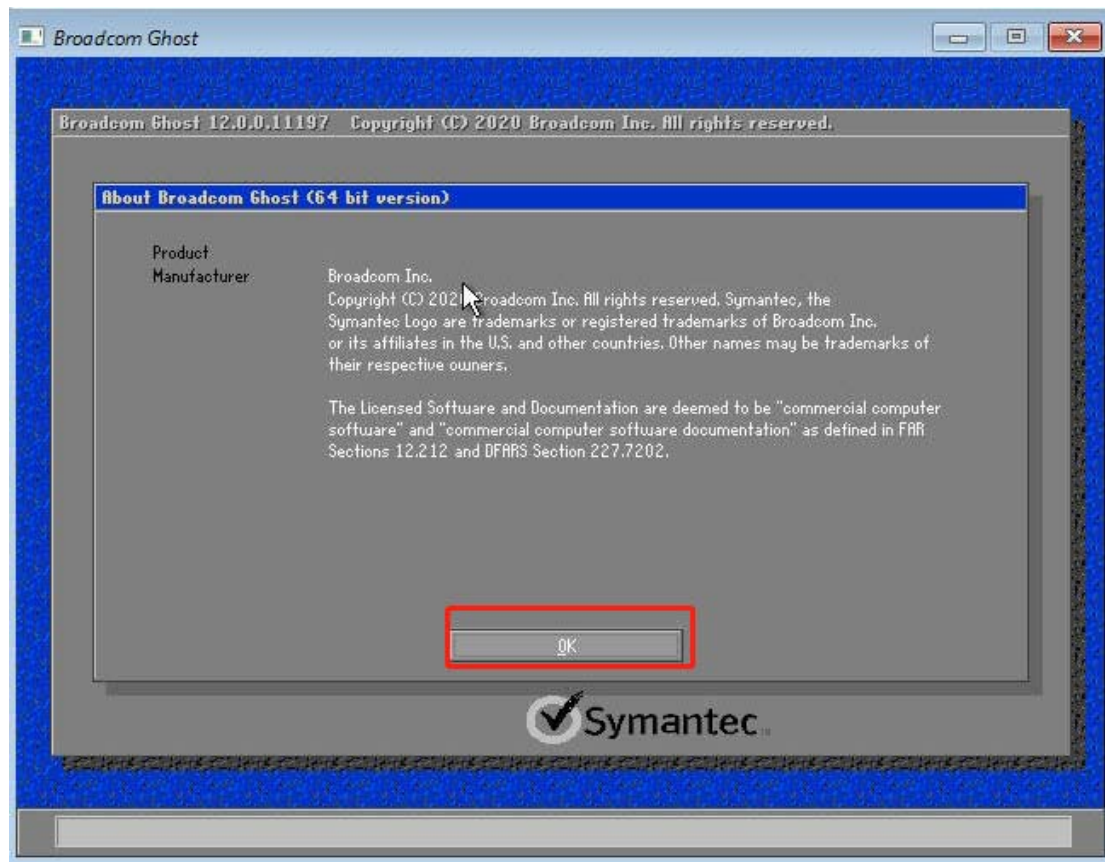


Select the image file to install the system, click "Local", "Disk", and "From Image" respectively;

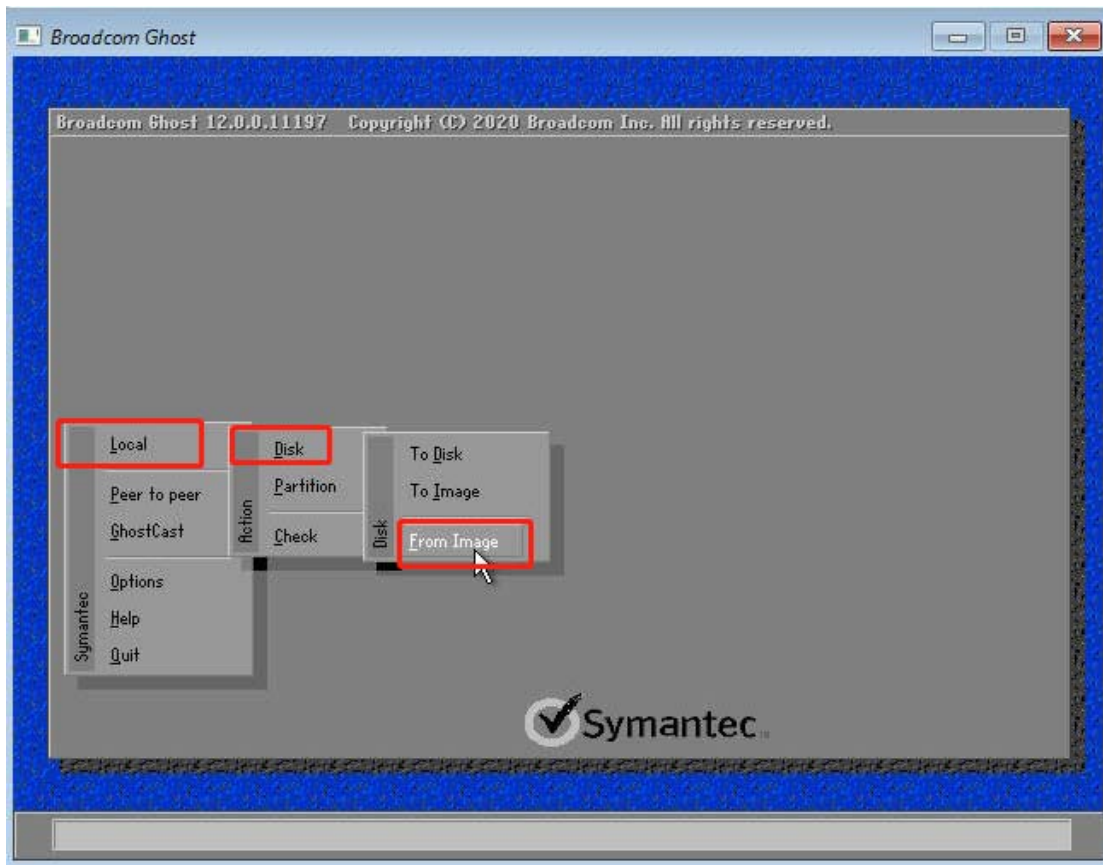


Select the USB drive storing the image file;

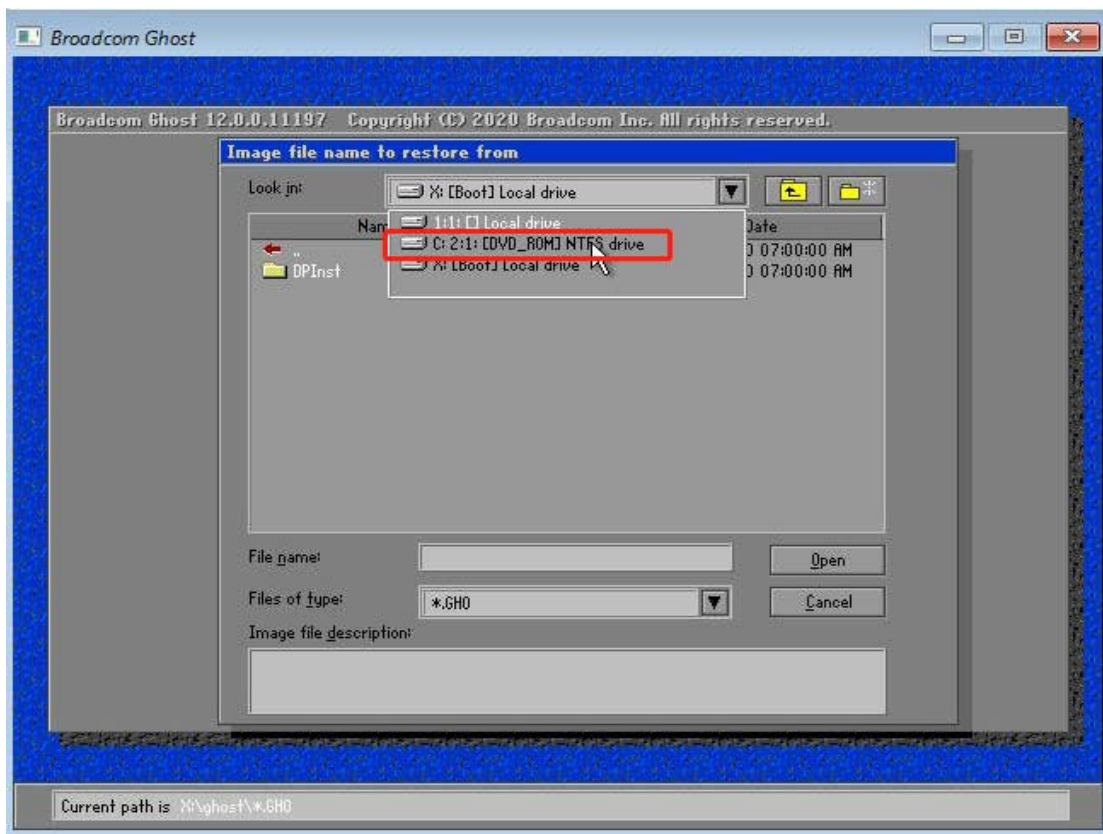


Select the system file in the USB drive, "ThinClient-GLA-4.16.18-1611.GHO";

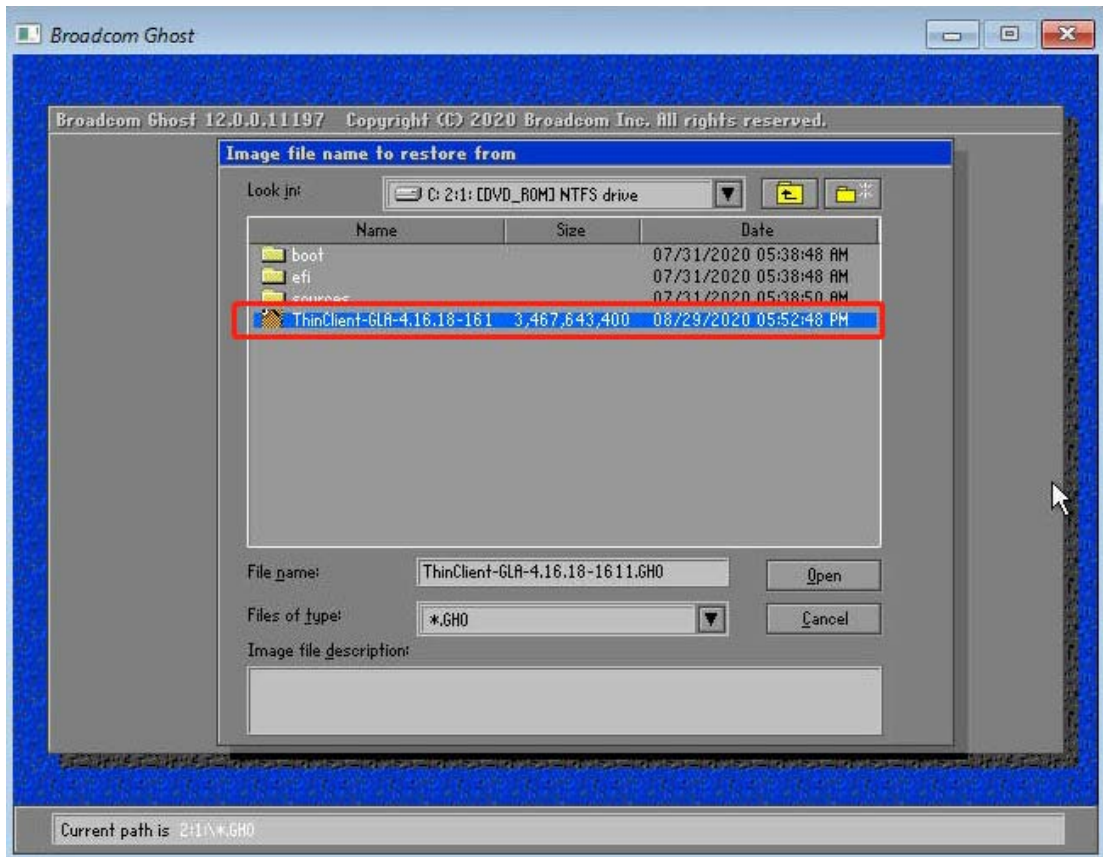


Select the hard disk to be installed and click "OK";

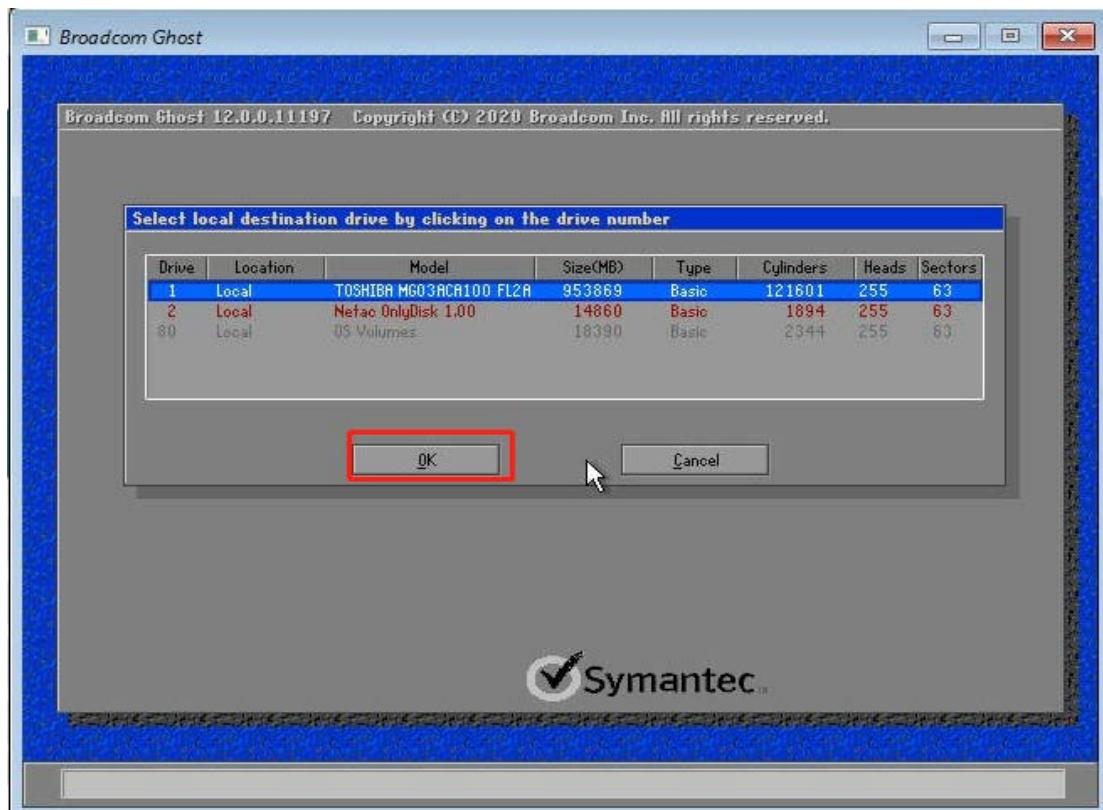


Adjust the size of the new partition, adjust the partition size to "235"; click "OK" after the modification is complete;

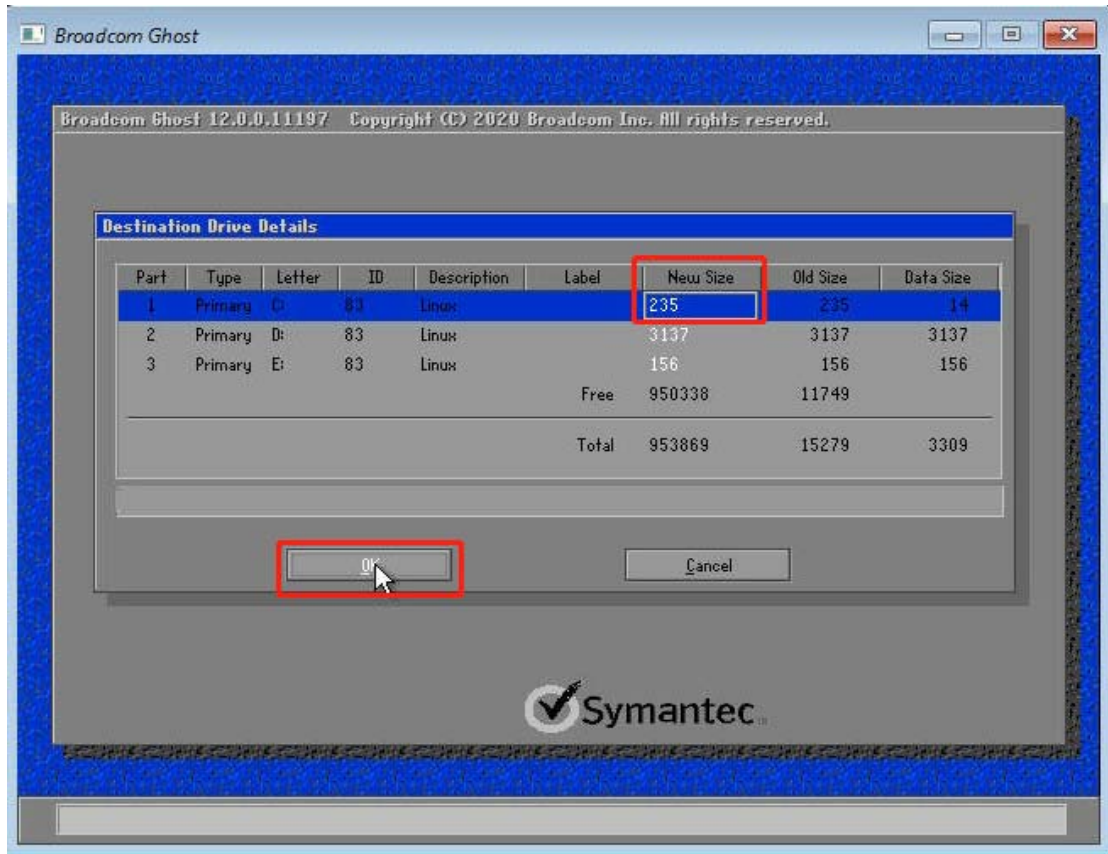


Restore the image file to the disk, click "Yes";

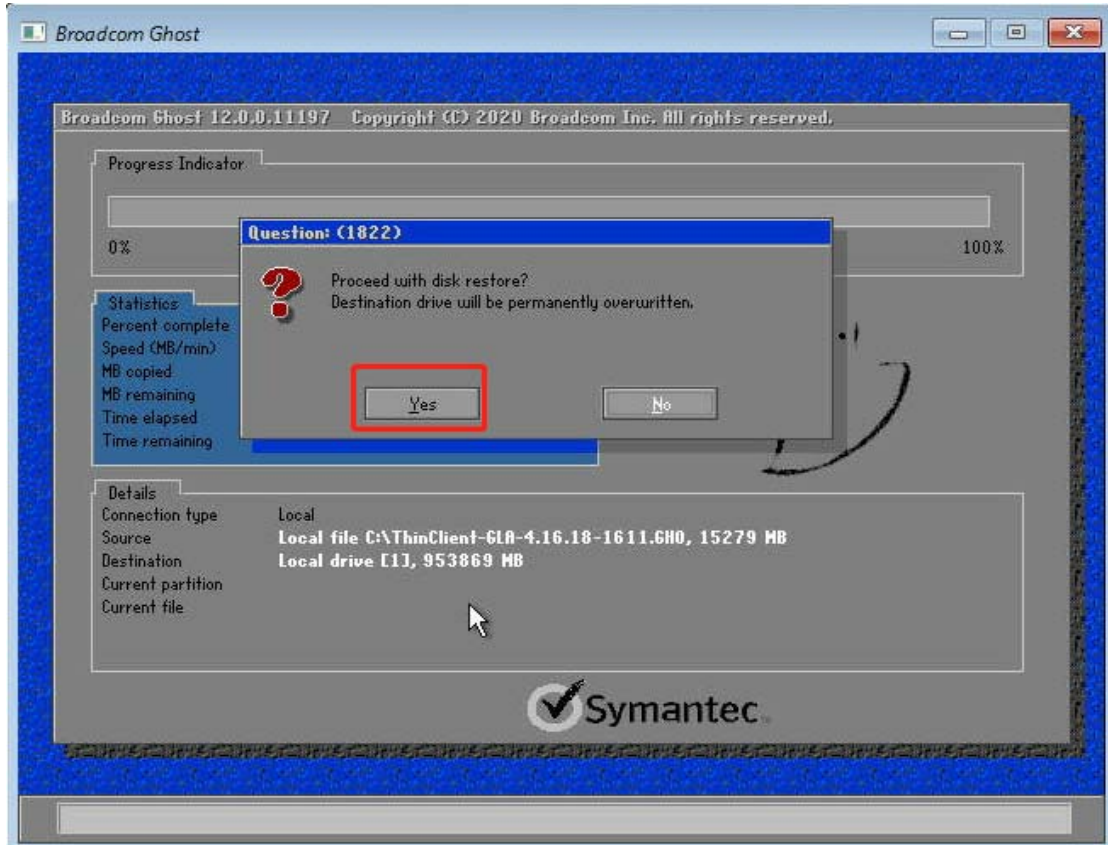


The system starts downloading and waits for the progress to complete;

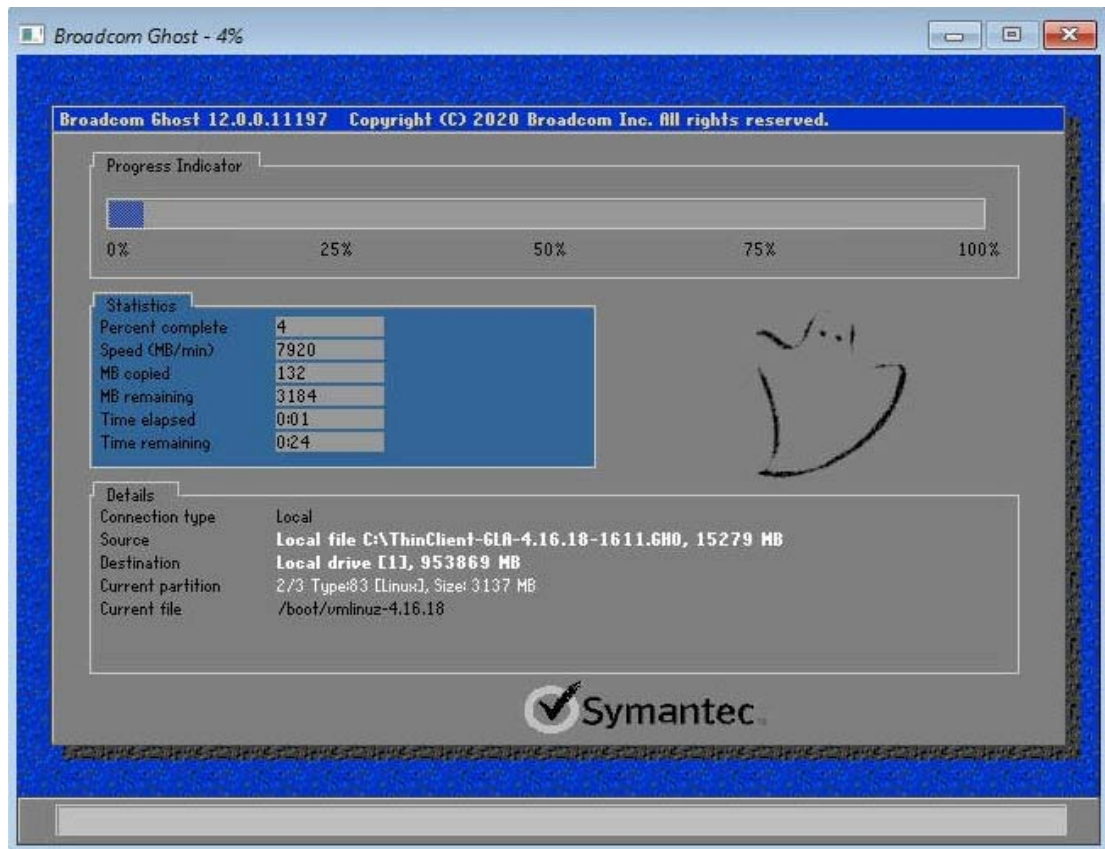

After the progress is completed, the Thin Client will be restarted after pressing the keyboard "Enter" key in the displayed prompt;

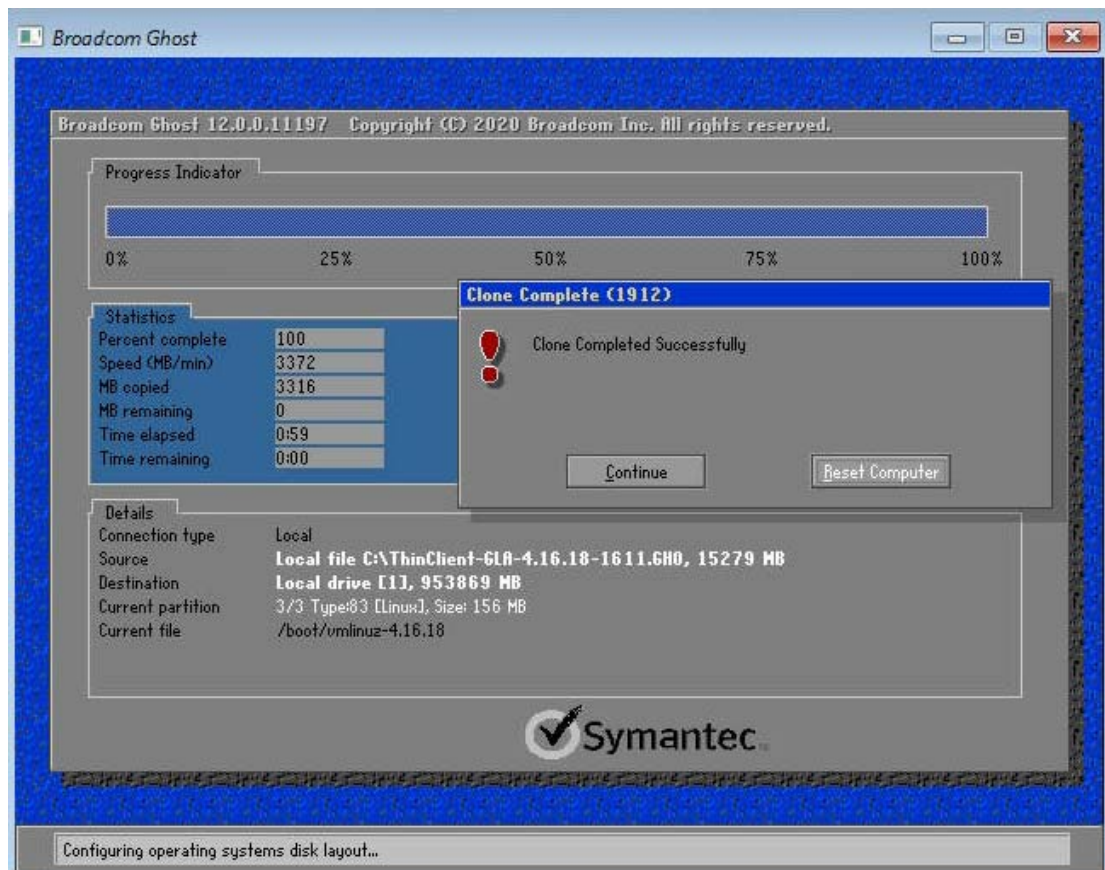


The Thin Client restarts, and after the restart is complete, enter the Thin Client interface;

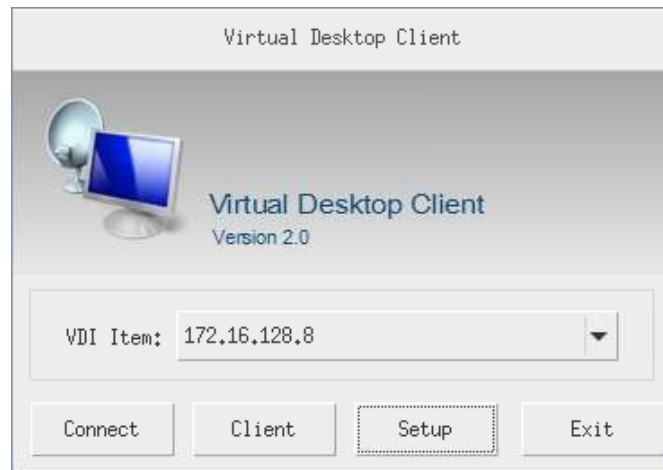

Remarks: During the installation the ThinLnx OS installer automatically Registers the 30 Day Free Trial with the ThinLnx License Server, you must be connected to the Internet with a DHCP Server on the local Network for the Free Trial to successfully Register your device.

- **ThinLnx OS activation license**

Check system trial status: Click "Setup" -> "Manage" -> "sysinfo" to view system information and trial status;

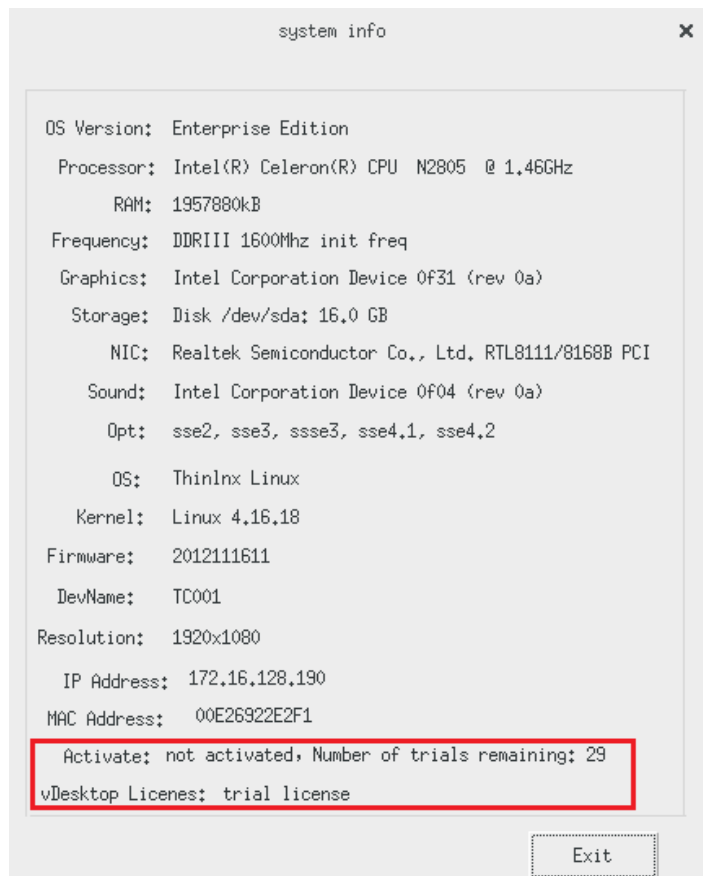

Purchase authorization activation method: Click to enter "Setup" -> "Manage", click "Activate" and "License" respectively, the device will be restarted during the activation process;

The screenshot shows the 'Manage Settings' window with various configuration options. The 'License' and 'Activate' buttons at the bottom are highlighted with a red box. The settings include:

- Manage Svr: [] AutoConfig
- Start Wait time: [] second (1-30 Second, default 3)
- Firmware (Version: ix 2012111611)
Type: Usb Disk network [update]
Update Server: [172.16.128.10]
- VNC Remote Control
Password: []
Re-Enter: []
- PPTP Server: [] AutoDialing
User: [] Password: []
- Secondly NIC: Not find network
Address type: Static Dynamic
IP Address: []
Subnet: []
Gateway: []
DNS Server1: []
DNS Server2: []
- dns record to hosts file
 Record1: []
 Record2: []
Example: 172.16.128.1 node.thinvirt.dg

Buttons: License, Activate, sysinfo, Save, Modify, Exit

Complete activation system status:

The screenshot shows the 'system info' window with the following system details:

```
OS Version: Enterprise Edition
Processor: Intel(R) Celeron(R) CPU N2805 @ 1.46GHz
RAM: 1957880kB
Frequency: DDRIII 1600Mhz init freq
Graphics: Intel Corporation Device 0f31 (rev 0a)
Storage: Disk /dev/sda: 16,0 GB
NIC: Realtek Semiconductor Co., Ltd. RTL8111/8168B PCI
Sound: Intel Corporation Device 0f04 (rev 0a)
Opt: sse2, sse3, ssse3, sse4.1, sse4.2
OS: ThinIrx Linux
Kernel: Linux 4.16.18
Firmware: 2012111611
DevName: TC001
Resolution: 1920x1080
IP Address: 172.16.128.188
MAC Address: 00E26922E2F1
Activate: activated
vDesktop Licenes: authorized
```

Exit